




A	B	A1	A2	A3	C1	C2	C3
250	250	91,6	87,5		26,8	169,2	
300	300	91,6	73	64	26,8	96	128
350	350	91,6	123,7	64	26,8	96	160
400	400	91,6	173,7	64	26,8	128	192
450	450	91,6	223,7	64	26,8	160	192
500	500	91,6	273,7	64	26,8	192	224
550	550	91,6	323,7	64	26,8	192	256
600	600	91,6	373,7	64	26,8	224	288

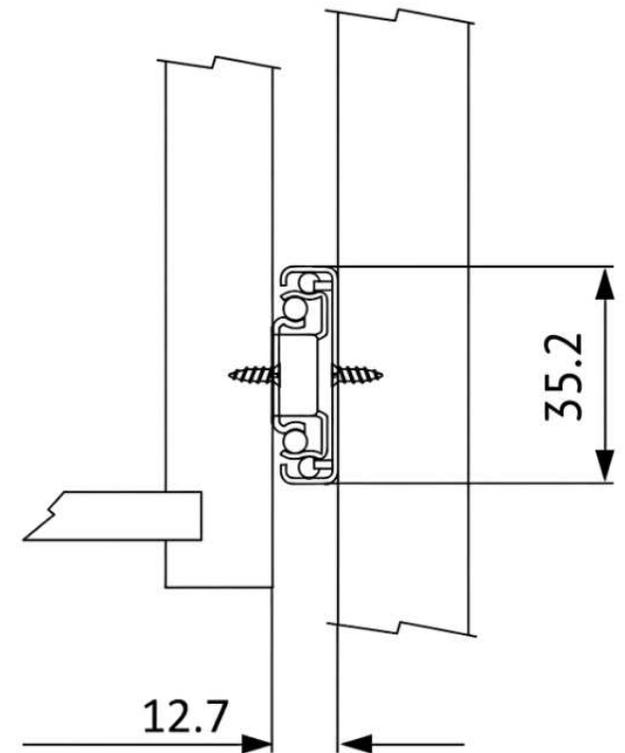

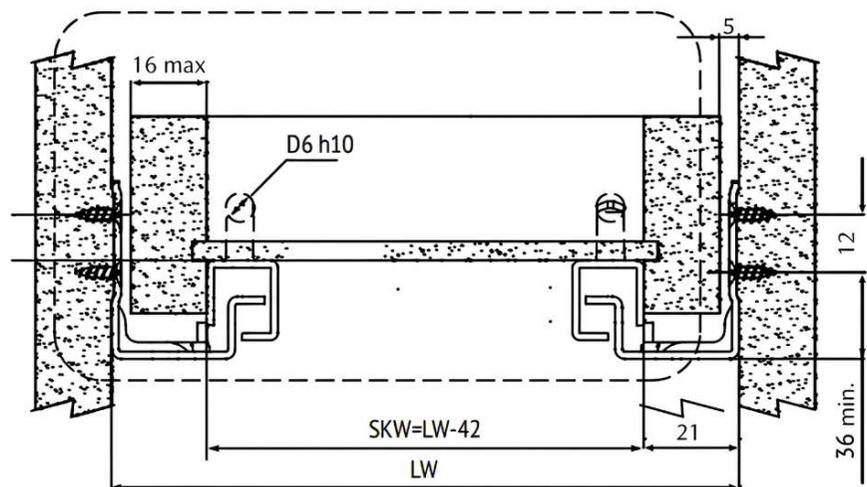

**LT** = внутренняя глубина ящика  
**LW** = внешняя глубина ящика  
**NL** = базовый размер направляющих

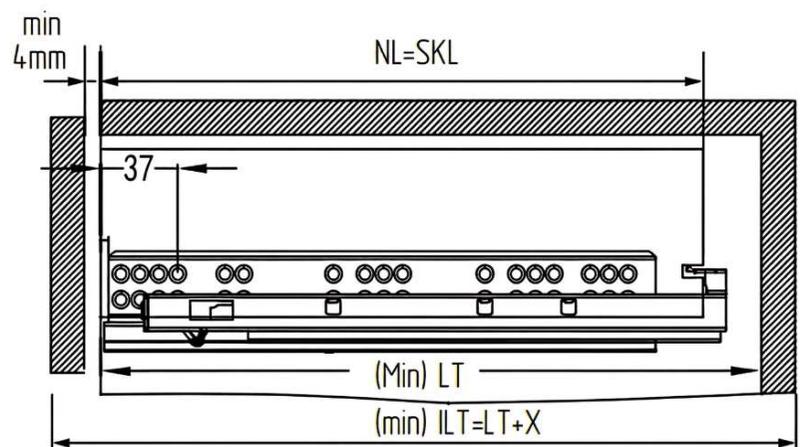

NL	300	350	400	450	500	550
LT	320	370	420	470	520	570